



Lenovo ThinkPad Yoga 14 20FY RAM Replacement

Replace the RAM card of your Lenovo ThinkPad Yoga 14 20F.

Written By: jose aguirre



INTRODUCTION

Has your computer performance diminished? Try replacing the RAM card.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [PC3-12800 8 GB RAM Chip](#) (1)

Step 1 — Back Cover

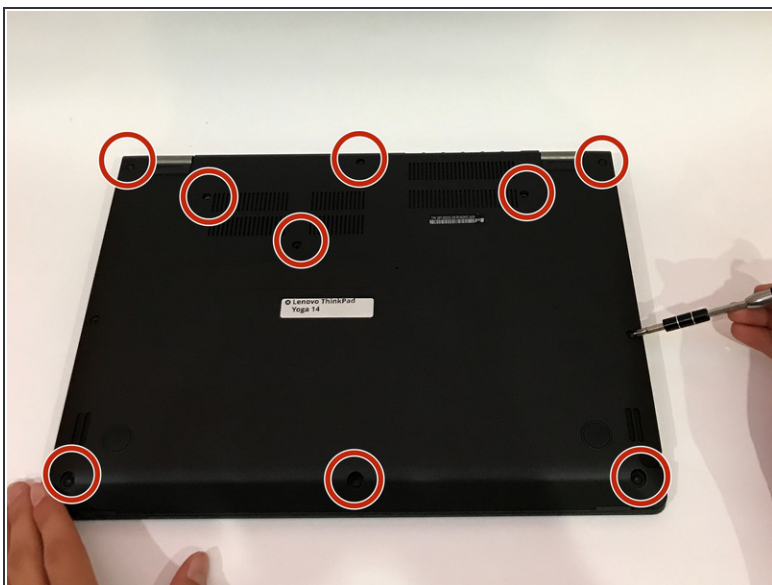

- Remove the indicated 9 M2 x 6 mm nylon-coated screws using a Phillips head screwdriver.


i The screws do not come all the way out. Do not force them out.

Step 2





- After removing all of the screws, gently lift up on all covers to remove the back plate and reveal the interior of the device.

Step 3 — RAM

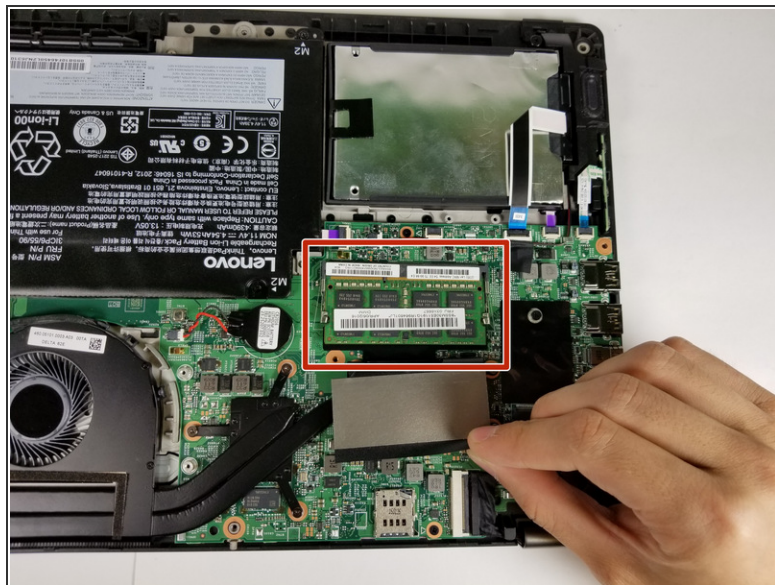

- The RAM is hidden behind the black piece of plastic. Pull the plastic back.

Step 4

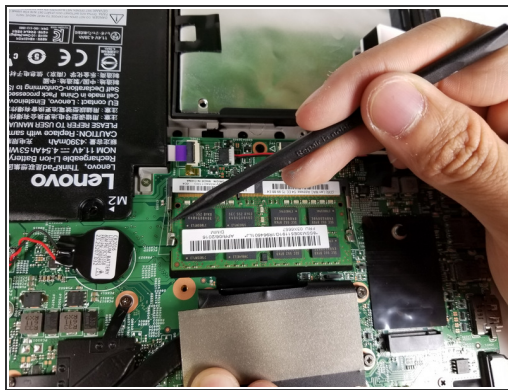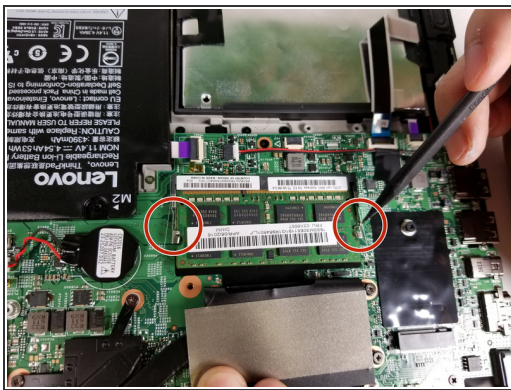

- The RAM is held in place by two metal pieces on both sides.
- Use the spudger to push off both metal pieces to release the RAM.

Step 5



- Take the ram card out of its slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 04:35:40 PM.